

✖ Please be sure to check before you use

auWi-Fi RENTAL Store

Easy to use !

Wi-Fi Setup Start Guide

Step 1 Turn on the Wi-Fi Router

Press and hold the power button for about 10 seconds.

PASSWORD



Power Button

auWalker HWD11(KDDI)

If LCD is shown, turning on the power is completed.

Back of router



There is password on back of router.

Password is combination of alphanumeric character. There is case-sensitive. Please note that a sticker on top is our store's number for control.

Step 2 Connect the Wi-Fi Router to your device such as a PC or a smartphone.

The PASSWORD is alphanumeric character of WPA key.

A sticker with the password is attached to the back of the rental router.

The connection to an iPhone / iPad

1. Click the "Settings" icon.
2. Select "Wi-Fi".
3. turn on "Wi-Fi".
4. Select the network 『HWD11-...』.
(Please click a letter not an arrow)
5. Input password.
(The password is WPA key written on a sticker at the back of router)
6. The connection is complete.

The connection to Android smartphone

1. Click the "Settings" icon.
2. Turn on "Wi-Fi".
3. Select the network 『HWD11-...』.
4. Input password.
(The password is WPA key written on a sticker at the back of router)
5. The connection is complete.

The connection to Windows8 PC

1. Move the mouse cursor to the upper-right or the lower-right corner of the screen, and display charm, then click [SET-UP]
2. Click the network icon.
3. Select 『HWD11-...』 from the list of [Wi-Fi]
4. Check "Connect automatically" and then, click "Connect".
5. The input screen of the network security key is displayed. Input password(WPA Key) and click "NEXT".
6. The confirmation screen of sharing setup is displayed. Click "Yes, turn on sharing and connect to devices".
7. If "Already connected" is displayed, the connection is completed.

The connection to Windows7 PC

1. Click the "Wireless Network" icon on the task bar on the lower right of the screen. Select 『HWD11-...』 from the list of the displayed wireless network.
2. Check "Connect automatically" and click "Connect".
3. The input screen of the network security key is displayed. Input the password, "WPA key". Then, click "OK".
4. The screen of "Setup of network places" is displayed.
5. "Network name" and "place types" which are already set up shall be displayed. Check that the router 『HWD11』 is contented and click on "CLOSE".
6. The connection is completed.

✖ It's possible to connect PC and Wi-Fi router via USB cable.

Step 3 The connection is completed. The internet is available.

✖ NOTE

The rental router switches to power saving mode and does not transmit Wi-Fi if no operation is made for 15 minutes.

If you press the power button, the router restores from saving mode.

✖ The power saving mode does not occur, during internet use.