

Easy to use !

Wi-Fi Setup Start Guide

Wi-Fi RENTAL Store

http://www.rental-store.jp/

Mail info@rental-store.jp

Step 1 Turn on the Wi-Fi Router

Press and hold the power button for about 10 seconds.



GL04P

Power Button



GL06P

Power Button

If LCD is shown, turning on the power is completed.

※NOTE !

When the power sign appears on the whole screen of the LCD, the power on the router is not yet turned on.



It takes about 30 seconds to boot completely.

Step 2 Connect the Wi-Fi Router to your device such as a PC or a smartphone.

※The **PASSWORD** is an 8 digit-number of WPA key.

A Sticker with the password is attached to the back of the rental router.

The connection to an iPhone / iPad

1. Click the "Settings" icon.
2. Select "Wi-Fi".
3. turn on "Wi-Fi".
4. Select the network 『GL04P-...』 or 『GL06P-...』.
5. Input password.

"The password is an 8 digit WPA key on the seal located at the back of the rental router."

6. The connection is complete.

The connection to Andorid smartphone

1. Click the "Settings" icon.
2. Turn on "Wi-Fi".
3. Select the network of 『GL04P-...』 or 『GL06P-...』.
4. Input password.

"The password is an 8 digit WPA key on the back of the rental router."

5. The connection is complete.

The connection to Windows8 PC

1. Move the mouse cursor to the upper-right or the lower-right corner of the screen, and display charm, then click [SET-UP]
2. Click the network icon.
3. Select 『GL04P-...』 or 『GL06P-...』 from the list of [Wi-Fi]
4. Check "Connect automatically" and then, click "Connect".
5. The input screen of the network security key is displayed. Input password(8 digit WPA Key) and click "NEXT".
6. The confirmation screen of sharing setup is displayed. Click "Yes, turn on sharing and connect to devices".
7. If "Already connected" is displayed, the connection is completed.

The connection to Windows7 PC

1. Click the "Wireless Network" icon on the task bar on the lower right of the screen. Select 『GL04P-...』 or 『GL06P-...』 from the list of the displayed wireless network.
2. Check "Connect automatically" and click "Connect".
3. The input screen of the network security key is displayed. Input the password, "8 digit WPA key". Then, click "OK".
4. The screen of "Setup of network places" is displayed.
5. "Network name" and "place types" which are already set up shall be displayed. Check that the router 『GL04P』 or 『GL06P』 is contented and click on "CLOSE".
6. The connection is completed.

- A software driver is required to use the router as an external USB modem.
- To install driver, turn on the router and plug it in to your computer's USB port. The driver will install automatically.
- After installation, internet access is available whenever the router is plugged in to your computer.

Step 3 The connection is completed. The internet is available.

※NOTE The rental router switches to power saving mode and does not transmit Wi-Fi if no operation is made for 10 minutes.

If you press the power button for 1 second, the router restores.

※The power saving mode does not occur, during internet use.

If the Wi-Fi sign is shown at the lower left of the LCD, Wi-Fi is transmitted. Check this Wi-Fi sign !

