



※Please be sure to check before you use

For SoftBank use

Ver 1.0

Easy to use !

Wi-Fi Setup Start Guide

Wi-Fi RENTAL Store
http://www.rental-store.jp/
Mail info@rental-store.jp

Step 1 Turn on the Wi-Fi Router

Please slide the power button to [ON].

Power Button

The power button is on an upper right aspect.



Next, [UNLOCK].

Please touch the mark of padlock on LCD screen.

Please touch it.



You can use shortly after turning on the button because initialization has already been completed by our store .

Step 2 Connect the Wi-Fi Router to your device such as a PC or a smartphone.

※The password is on the seal located at the back of the rental router.

The connection to an iPhone / iPad

1. Click the " Settings " icon.
2. Select "Wi-Fi".
3. turn on "Wi-Fi".
4. Select the network 『303zt-...』
(Please click the letter, not the arrow.)
5. Input password.
"The password is on the seal located at the back of the rental router."
- 6.The connection is complete.

The connection to Android smartphone

1. Click the " Settings " icon.
2. Turn on "Wi-Fi".
3. Select the network 『303zt-...』
4. Input password.
"The password is on the seal located at the back of the rental router."
- 5.The connection is complete.

The connection to Windows8 PC

- 1.Move the mouse cursor to the upper-right or the lower-right corner of the screen, and display charm, then click [SET-UP]
2. Click the network icon.
3. Select 『303zt-...』 from the list of [Wi-Fi].
4. Check "Connect automatically" and then, click "Connect".
5. The input screen of the network security key is displayed. Input password and click "NEXT".
6. The confirmation screen of sharing setup is displayed. Click "Yes, turn on sharing and connect to devices".
7. If "Already connected" is displayed, the connection is completed.

The connection to Windows7 PC

- 1.Click the "Wireless Network " icon on the task bar on the lower right of the screen. Select 『303zt-...』 from the list of the displayed wireless network.
2. Check "Connect automatically" and click "Connect".
- 3.The input screen of the network security key is displayed. Input the password, "The password is on the seal located at the back of the rental router. "Then, click "OK".
4. The screen of "Setup of network places" is displayed. Select " Home Network "
- 5."Network name" and "place types" which are already set up is displayed. Confirm the contents and click on "CLOSE".
6. The connection is completed.

※It's possible to communicate by connecting PC and Wi-Fi router with USB cable.

The password is described on the seal located at the back of the rental router. The password is alphanumeric.

Password

Back side



Step 3 The connection is completed. The internet is available.

※NOTE

The battery lasts for 3 or 4 continuous hours.

Please turn off the power button when you don't use. (The battery power is burned even if LCD is OFF)

Please contact us by calling or email if you have any question regarding a connection.

It's possible to download a detailed instructions from our website.

Wi-Fi RENTAL Store